4

❖ Select Dial/Push Phone

Use this function to select a line type.

Dial and Push lines are available for selection.

The default setting is Push Phone.

This function is not available in some areas.

- ① Select [Fax Features] using [▲] or [▼], and then press the [OK] key.
- ② Select [Administrator Tools] using [▲] or [▼], and then press the [OK] key.
- ③ Select [Select Dial/Push Phone] using [▲] or [▼], and then press the [OK] key.
- ④ Select [Push Phone] or [Dial Phone (10PPS)] using [▲] or [▼], and then press the [OK] key.

G3 Analog Line

You need to make the following settings for the G3 Analog Line before you connect the machine to a standard G3 analog line.

- When your machine is connected through a PABX, set to Extension. If it is connected directly to the telephone network, set to Outside.
- Outside Access No.
 Use this setting if your machine is connected to a PABX that requires you to dial a certain number such as "0" followed by a pause to connect to the outside line. By programming "0" as the PSTN Access Number, a pause will be inserted automatically after the "0" when dialing.
- Select [Fax Features] using [▲] or [▼], and then press the [OK] key.
- ② Select [Administrator Tools] using [▲] or [▼], and then press the [OK] key.
- ③ Select [G3 Analog Line] using [▲] or [▼], and then press the [OK] key.
- ④ Select [Extension/Outside] using [▲] or [▼], and then press the [OK] key.
- ⑤ Select [Extension] or [Outside] using [▲] or [▼], and then press the [OK] key.
- ⑤ Select [Outside Access No.] using [▲] or [▼], and then press the [OK] key.
- ② Enter the Outside Access No. using the number key, and then press the <code>[OK]</code> key.

You can program the number up to two digits.

If you make a mistake, press the [Clear/Stop] key, and then enter again.

Press the [User Tools/Counter] key.